




User Manual of Induction Cooktop

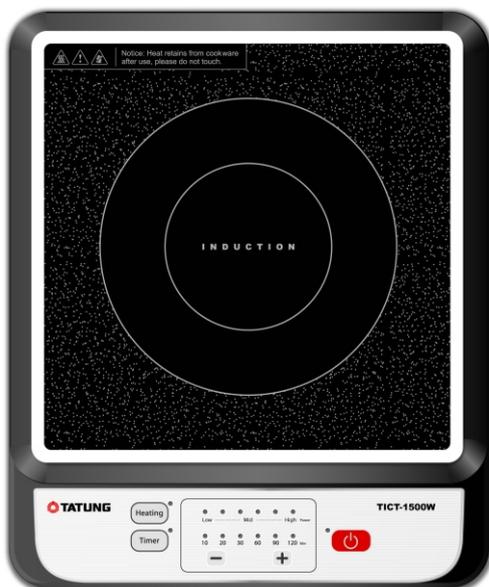

Model: TICT-1500W

Thank you for purchasing the TATUNG induction cooker. Please read this instruction manual carefully before using and keep it cautiously in order to refer to in future

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	1
WARNING	2
FCC Requirements	3
Product Introduction	4
Features	4
Specification	4
Operation Instructions	4
Suitable cookware	6
Cleaning and Maintenance	6
Trouble shooting	7
Special Declaration	7

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions before use the induction cooker.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to Tatung service department for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Do not use appliance for other than intended use.

13. **WARNING!** To prevent electric shock, unplug before cleaning.
14. This appliance has polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact Tatung service. Do not attempt to modify the plug in any way.
15. Do Not cook on broken-Top If cook-top should break, cleaning solution and spillovers may penetrate the broken cook-top and create a risk electric shock.
16. Clean Cook-Top with Caution: If a wet sponge or cloths used to wipe spills on a hot cooking area, be careful to avoid steam burn not. Some cleaners can produce noxious fumes if applied to a hot surface.
17. Servicing should be performed by an Tatung service.
18. Metallic objects such as knives, forks, spoons and lids should not be placed on the plate to avoid this vessel to heat.
19. HOUSEHOLD USE ONLY.
20. DO NOT IMMERSE IN WATER.

Save These Instructions.

WARNING

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

1. A short power-supply cord should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if only use carefully.
3. If a longer extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
 - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

FCC Requirements

WARNING: Any changes or modifications made to this unit not expressly approved by Rena Ware could void the user's authority to operate the equipment.


NOTE:

- This equipment has been tested and found to comply with the limits for consumer ISM equipment, pursuant to Part 18 of the FCC Rules.
- These limits are designed to provide reasonable protection against harmful interference.
- This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.
- If this equipment does cause harmful interference to radio, cell phone, or television reception, which can be determined by turning it off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna
 - Increase the separation between the equipment and receiver
 - Connect to an outlet on a circuit different from the receiver
 - Consult an experienced radio or television technician for help
- Please read your Use & Care booklet thoroughly before using your Induction Cooker for the first time. Failure to follow the guidance provided by the Use & Care will void the warranty.

Product Introduction

TICT-1500W with micro-computerized control and complete functions is able to meet various kinds of cuisine demands by electromagnetic heating. It is your optimal choice.

Features

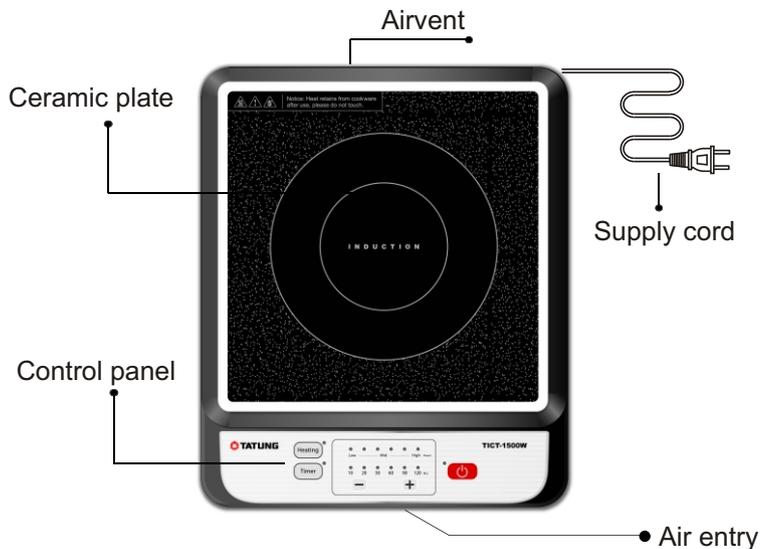

Specification

Model	Applied voltage/frequency	Rated power	Dimension(in) (W*D*H)	Weight (lbs)
TICT-1500W	120V~ /60Hz	1500W	14.17"x11.81"x2.44"	5.94

Operation Instructions

1. Put the pot on the hotplate.

Put the pot in the center of the ceramic plate. Please note that it is in the midpoint.

Affirm the air vent without any jam, without any metallic objects all around.

2. Plug in

- After the power supply is connected, the buzzer sounds.

3. Power on:

- Press the “” key, the buzzer sounds and the “” indicator lamp flickers, indicating that the unit is in a state of standby.
- When the induction cooker turn on for two minute and no function key is pressed, the unit will turn off automatically.

4. Heating:

- Press the “” key when the unit is in standby mode, the buzzer sounds, the “” and “” indicator lamp light, the induction cooker starts the heating function.
- The highest temperature is 430°F. The appliance will shut off automatically when it reaches 432°F. you can adjust the heating by pressing the “+” or “-” button.

5. Timer:

- 2 kinds of timer: manual and default.
- The heating function can adopt manual and default timer.
- When the timer is default, the appliance will be turned off after reaching two hours.

The default timer for every level is shown in the following table:

Heating Power	Low Mid High					
Default Timer (hours)	2	2	2	2	2	2

- Under the heating function, press the “” key to change to manual timer mode. You can select timer level by pressing the “+” or “-” key. When the timer is manual, the appliance will shut off accordingly. If you wish to reset, press time key to reset.

The manual timer for every level is shown in the following table:

Heating Power	Low Mid High					
Manual Timer (minute)	10	20	30	60	90	120

6. Shut down

After using, please press the “” key, the unit will stop heating.

Suitable cookware



Iron oil frying pan



Stainless steel pot



Iron pan



Iron kettle



Enamel stainless steel kettle



Enamel cooking utensil



Iron plate

1. Please use the pots sold along with this appliance. It is better not to use other alternatives to avoid any unfavorable influence on the operational performance. Please observe the following conditions when you use other cookware:
 - *Requirement for pot materials: containing magnetic inducting materials;*
 - *Shape requirement: flat bottom with the diameter within the range of 4.7" and 10.2".*
2. After first use, some white spots would appear at the bottom of the pot. This is normal. Please pour some vinegar into the pot and set low heat to heat up for 15 mins. then wipe the spots away with brush. Please be careful with the remaining heat.
3. The induction cooker can identify mostly stainless steel pots.
4. If there is no cookerware or the cookerware is not proper. The buzzer sounds about 10 seconds, and then it will turn off.

Cleaning and Maintenance

Please pull out the plug and wait the remain heat is cool before maintenance.

1. Ceramic panel and control panel

Slight stains: Please wipe off plate with soft moistened cloth .

Tough stains: Please clean with soft moistened cloth dipped in little toothpaste or neutral liquid cleaner and clean with soft moistened cloth until no residue exists.

During the cleaning, never clean the cooker surface with a rigid brush.

2. The induction cooker body shall be cleaned lightly with soft dry cloth. The dust around the air entry and air outlet can be cleaned with a flexible brush or cleaner.

Trouble shooting

1. Power cord replacement

If the power cord is damaged, please contact Tatung service. For the purpose of your safety, please never replace it by yourself.

2. Trouble shooting

Problem		Possible cause
After power is supplied, the "ON/OFF" indicator lamp fails to light up.		<ul style="list-style-type: none"> ■ Whether the plug is inserted tightly. ■ Whether the switch, socket, fuse and power cord are in good condition. ■ Whether the circuit is over load.
The "ON/OFF" indicator lamp lights up, but heating does not start.		<ul style="list-style-type: none"> ■ Whether the pot materials are acceptable. ■ For other reasons, please contact Tatung service.
Heating stops suddenly during operation.		<ul style="list-style-type: none"> ■ Whether the air entry or the air vent is blocked. ■ Whether the timing period reaches.
Code of failure	Lamp 1、2 flicker; Lamp 2、3 flicker	<ul style="list-style-type: none"> ■ Wait a moment and press the "ON/OFF" button when the temperature of the hotplate becomes normal, the induction cooker will operate as usual.
	Lamp 1、2、3 flicker; Lamp 4 flicker	<ul style="list-style-type: none"> ■ Wait a moment when the voltage becomes normal, the induction cooker will operate as usual.
	Lamp 1 flicker; Lamp 2 flicker; Lamp 3 flicker; Lamp 1、3 flicker; Lamp 1、2、4 flicker; Lamp 3、4 flicker	<ul style="list-style-type: none"> ■ Please contact Tatung service department.

Special Declaration


All the contents in this material have been subjected to careful check. For any mistakes and omissions in printing or misunderstanding of the contents, the company keeps the right to interpretation.

Addition: any technical improvements shall be placed in the revised manual without notice; for any changes in appearance and color, those of the actual product shall prevail.

For any service, please contact Tatung Company of America, Inc.
2850 E1. Presidio. St. Long Beach, CA 90810
1800. 827. 2850 EXT 216



電磁爐說明書

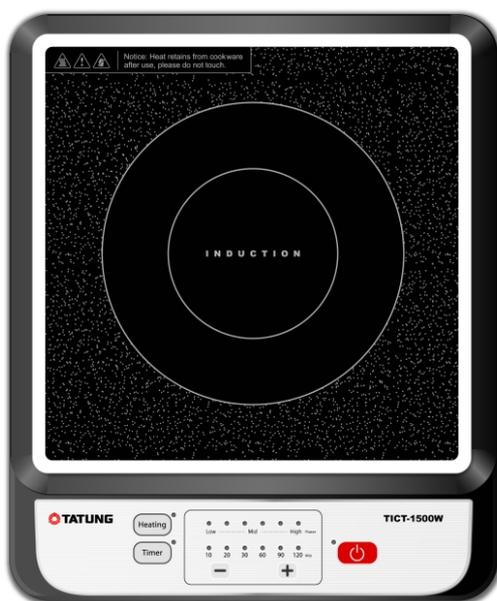

型號: TICT-1500W

謝謝您購買TATUNG電磁爐，在使用前請先詳細閱讀此說明書，閱讀後請小心收藏，以備日後查閱。

目錄

重要安規	1
其他安全措施	2
FCC要求	2
產品簡介	3
產品示意圖	3
規格	3
使用方法	3
適用鍋具	5
保養方法	5
故障排除	6
大同售後服務	6

重要安規

當使用家電時，必須遵守以下安全防護措施：

1. 使用電磁爐前請仔細閱讀說明書
2. 不要接觸高溫表面，必要時請使用手柄
3. 爲了防止電擊，請不要把電源線、插頭浸入水中或其他液體中
4. 當器具被小孩使用或小孩靠近器具時務必小心照顧
5. 清潔前請拔掉插頭等器具冷卻後方可收藏
6. 如果器具電源線或插頭損壞或者器具的任何功能出現故障後，請不要使用器具，應把器具拿到大同售後服務部門進行檢測、維修或調試。
7. 爲了避免人身傷害，請使用說明書上認可的器具
8. 不要戶外使用
9. 不要把電源線懸掛在桌子、櫃子邊緣，不要接觸高溫表面
10. 器具不要放置在燃氣竈、電爐、烤箱旁
11. 當移動含有熱油或者高溫液體的容器時，請務必高度小心
12. 不要把器具作爲其他用途
13. 警告：爲了防止電擊，清潔前請拔下插頭
14. 器具帶有極性插頭(一個插銷比另一個寬)，爲了防止電擊，極性插頭插到極性插座只有一個方向；如果插頭不能插入到插座，請將插頭換一個方向插，如果仍不能插入，請聯系大同售後服務部門，不要試圖通過任何方式改變插頭的形狀

15. 如果陶瓷板表面破裂，請勿使用；如果烹飪區域表面破裂，清潔時液體將沿着裂縫流入到器具內部，以至引起電擊危險
16. 清潔陶瓷板表面請注意。如果用濕的海綿或抹布去清潔高溫烹飪區域溢出的液體時，小心蒸汽燙傷；一些清潔用具如果去清潔高溫表面時將產生有毒濃焰。
17. 任何維修應該在具有相應資格的維修處進行
18. 請勿把金屬物件例如刀、叉、勺、蓋等放置在電磁爐上，以免器具工作時加熱這些金屬物件。

請小心收藏

其他安全措施

如果電源線出現損壞或如果電器間歇工作或全面停止工作，則不要操作電器。

1. 配備短電源線，以降低較長電源線纏繞或絆人的風險。
2. 可提供較長的延長線，應小心使用。
3. 如果使用較長的延長線：
 - 1) 則延長線的電功率容量應至少與電器的電功率容量同樣大；
 - 2) 安排好較長的電源線，使其不會從櫃臺或桌面上垂下來，否則可能被兒童拉下來或絆倒兒童。

FCC 要求

警告：未經Rena Ware的明確批准，如變更或修改本設備，可能導致用戶失去操作設備的權利。


注意：

- 本設備已經按FCC 規則第18部分的規定進行測試，符合消費品ISM設備的極限。
- 這些限制旨在合理預防住宅安裝中的有害干擾。
- 本設備產生、使用並可輻射射頻能，如果不根據說明安裝與使用，可能給無線電通信造成有害干擾。
- 如果通過打開與關閉設備的電源確定本設備給收音機、手機或電視接收造成有害干擾，建議用戶採用下列一種或多種措施設法糾正干擾：
 - 1) 改變接收天線的方向或重新放置接收天線。
 - 2) 增加設備和接收機之間的間隔。
 - 3) 將設備與電路上的一個插座連接，此插座不同于接收機所需的插座。
 - 4) 向大同售後服務部門尋求幫助。
- 首次使用電磁爐之前請全面閱讀《使用與維護》手冊。不遵循《使用與維護》手冊內提供的指導，將可能使本保證無效。

產品簡介

TICT-1500W多功能電磁爐，採用電磁加熱方式，微電腦控制，功能齊全，滿足各種不同的烹飪需求，是現代家庭的理想選擇。

產品示意圖：

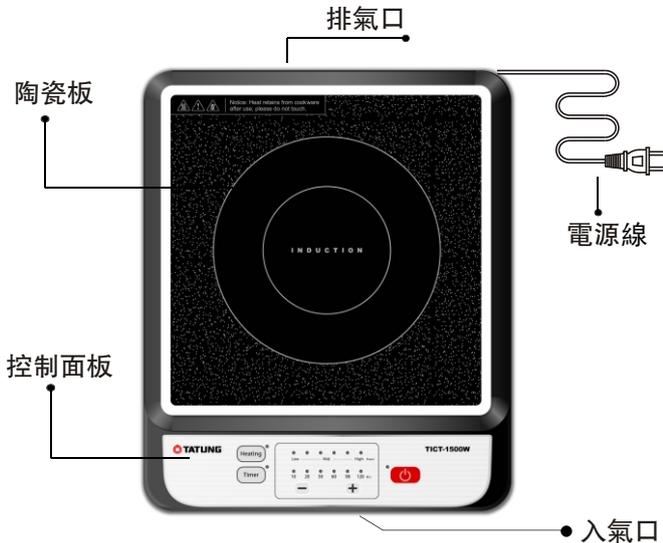

規格：

產品型號	額定電壓/ 頻率	額定功率 (W)	外形尺寸(英寸) (WxDxH)	重量(磅)
TICT-1500W	120V~/60Hz	1500W	14.17"x11.81"x2.44"	5.94

使用方法：

1. 放上鍋具：

- 把盛有食物的鍋具放置於陶瓷板正中央。
- 確認電磁爐吸排氣口沒有被堵塞，周圍沒有鐵質物品。

2. 插上電源：

- 插上電源，蜂鳴器響一聲。

3. 開機：

- 按下“”鍵，蜂鳴器響一聲，“”指示燈閃爍，此時電磁爐處於待機狀態。

- 開機後2分鐘內不選擇功能鍵啓動電磁爐，則自動關機。

5.加熱：

- 待機狀態下按 “” 鍵，蜂鳴器響一聲，“” 與 “” 功能指示燈亮，電磁爐啓動加熱功能。
- 加熱功能可通過 “+”、“-” 鍵調節功率高低。
- 加熱最高溫度430度華氏。當溫度高於432度華氏，電磁爐會自動關機。

7.定時

- 定時分手動定時和自動定時兩種
- 加熱功能既可以採用默認定時，也可以手動定時。
- 加熱功能下，如果沒有手動去設定定時，或者設定定時爲0，則自動採用默認定時。

各檔定時時間如下表：

加熱功能檔位	低 中 高					
	Low		Mid		High	
自動關機時間 (小時)	2	2	2	2	2	2

- 加熱功能下，按 “” 鍵可以進入定時模式，分別按下 “+” “-” 鍵可以進行定時選擇。

各定時關機時間如下表：

加熱功能檔位	低 中 高					
	Low		Mid		High	
定時關機時間 (分鐘)	10	20	30	60	90	120

- 定時狀態下，若5秒內沒有再按 “+” “-” 鍵則開始進行設定時間倒數計時；
- 在定時狀態下，通過按 “” 鍵可以取消定時功能。
- 在定時狀態下，若希望重新進行時間設定，必須退出當前定時功能後，才可以進行。
- 當加熱時間達到設定定時時間，電磁爐將自動關機，蜂鳴器響。

8.關機

- 使用完畢後，請按 “” 鍵關機，電磁爐停止加熱。

適用鍋具:



油煎平底鐵鍋



不銹鋼鍋



平底鐵鍋



鐵壺



搪瓷不銹鋼壺



搪瓷炊具



鐵盤

- 1.請使用配售的鍋具,最好不用其它替代品,以免使用性能受影響。如果使用其它鍋具,請遵守以下條件:
 - 鍋具材質要求:含有導磁性材料;
 - 形狀要求:底部平坦,直徑不小於4.1",不大於10.2"。
- 2.第一次使用後,鍋底會可能出現白點,此屬正常現象。在鍋內加入少許醋,低溫微熱15分鐘,再用毛刷擦洗即可。
- 3.電磁爐能識別大部分鍋具,但玻璃、陶瓷、鋁、銅以及其它非磁性鋼材制成的鍋具不適用。
- 4.當電磁爐檢測到無鍋、或不適用鍋具時,則蜂鳴器會提示無鍋,持續10秒後自動關機。

保養方法:

清潔維護方法:

1.陶瓷面板與控制面板

- 輕微污垢:請用柔軟的濕抹布擦拭。
- 油污垢:以柔軟的濕抹布沾少量牙膏或中性洗潔劑擦拭,然後再以柔軟的濕抹布擦拭至不留殘渣。
- 清理時請勿使用堅硬之刷子刷洗爐面。

2.電磁爐爐體以柔軟乾布輕拭

- 入氣口及排氣口灰塵,可用柔軟的毛刷子或吸塵器清理。

故障排除方法：

1. 電源線的更換：

- 若電源線損壞時，必須由大同售後服務處進行維修。請不要自行修理，以免發生危險。

2. 故障的排除：

故障現象		檢查要點
插上電源線，按“開／關”鍵後，指示燈不亮。		<ul style="list-style-type: none"> ■ 插頭是否插緊； ■ 開關、插座、保險絲、電源線是否完好； ■ 電壓是否超負荷
“開／關”指示燈亮，但不加熱。		<ul style="list-style-type: none"> ■ 鍋具材料是否符合； ■ 其它原因，請聯絡大同售後服務部門
使用中突然停止加熱		<ul style="list-style-type: none"> ■ 四周環境的溫度是否很高； ■ 入氣口、排氣口是否堵塞； ■ 是否定時時間已到； ■ 系統保護裝置發生作用，等幾分鐘後再通電使用
出現故障代碼	指示燈1、2閃動 指示燈2、3閃動	<ul style="list-style-type: none"> ■ 等待一段時間後，爐溫恢復正常，再按“開／關”鍵，可恢復工作。
	指示燈1、2、3閃動 指示燈4閃動	<ul style="list-style-type: none"> ■ 待供電電壓正常後，可自動恢復工作
	指示燈1閃動 指示燈2閃動 指示燈3閃動 指示燈1、3閃動 指示燈1、2、4閃動 指示燈3、4閃動	<ul style="list-style-type: none"> ■ 請聯絡大同售後服務部門

大同售後服務

2850 E. E1 Presidio St.
 Long Beach, CA 90810
 1800. 827. 2850 EXT216